


PARTS LIST MODEL 443 FLOW FUSE

ITEM	QTY	PART NO.	DISC.
1	1	432	body
2	1	444-1	adj. screw (retainer)
3	0	delete	retainer ring
4	1	445-4	ball valve
5	1	445-5	spring
6	1	445-6	label
7	1	443-7	repair kit item 2,4,5

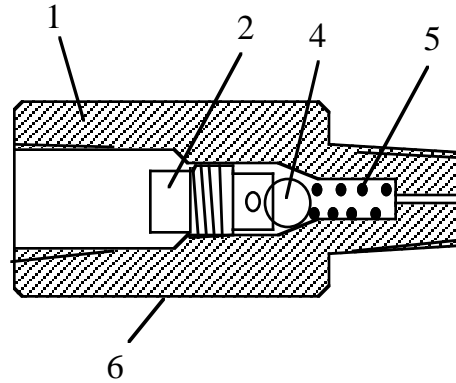

NOTES;

1. Technical bulletin - 650
2. To assemble, install spring 5, then ball 4. Screw in item 2 with screwdriver slot outward until ball seats gently against body. Check for full closure by trying to blow through flow fuse. Then back off adjusting screw to desired setting. See adjustment instructions above.

MODEL 796 FLOW RESTRICTOR

